

Leak Detection

LDRA6

User Guide



Copyright and Trademark Notices

© Raymond & Lae Engineering, Inc. 2011. All rights reserved. RLE® is a registered trademark and Seahawk™, Falcon™, and Raptor™ are trademarks of Raymond & Lae Engineering, Inc. The products sold by Raymond & Lae Engineering, Inc. are subject to the limited warranty, limited liability, and other terms and conditions of sale set forth at <http://rletech.com/RLE-Terms-and-Conditions.html>.

Revision History

Rev. No.	Date
2.0	June 2010
2.1	January 2011
2.2	February 2011

Note: As necessary, blank pages are added to make the page count even.

Product Registration

Product registration helps RLE Technologies inform owners of:

- Product upgrades
- Firmware enhancements
- New products and technologies
- Special offers available only to registered users

Submit registration information on the Support/Product Registration webpage at www.rletech.com.

Any information provided to RLE Technologies through the registration form will be regarded as confidential. RLE will not sell or distribute any of the information to third parties. To read our Privacy Policy, please visit our website: www.rletech.com.

Technical Support

Personal assistance is available Monday through Friday, from 8:00 a.m. to 5:00 p.m. MST.

For more information, please download the *Product User Guide* located on the Products/LDRA6 section on our website at www.rletech.com.

A request for assistance may be sent to support@rletech.com.

Otherwise, please call us directly at: **(970) 484-6510**, and press “2” for technical support.

The following information is located on the bottom of each LDRA6 unit. Please have this information available whenever a technical support call is placed:

Product Model Number

Product Serial Number

Product Manufacture Date

RLE Product Warranty

Seller warrants to the Ultimate Purchaser (the purchaser who buys for use and not for resale) that all products furnished under this order and which are manufactured by Seller will conform to final specifications, drawings, samples and other written descriptions approved in writing by Seller, and will be free from defects in materials and workmanship. These warranties shall remain in effect for a period of twelve (12) months after shipment. If the Seller installs the equipment or supplies technical direction of installation by contract, said one year shall run from the completion of installation, provided installation is not unreasonably delayed by Ultimate Purchaser. Parts replaced or repaired in the warranty period shall carry the unexpired portion of the original warranty. A unit placed with the purchaser on consignment and then later purchased will be warranted for twelve (12) months from the time the Seller receives notification of the Purchaser's intent to purchase said consigned item. The foregoing is in its entirety is subject to the provision that in no case will the total warranty period extend beyond 18 months from date Seller ships equipment from point of manufacture.

Products are NOT life and safety certified. In no event shall the Seller be liable for loss, damage, or expense directly or indirectly arising from the use of the units, or from any other cause, except as expressly stated in this warranty. Seller makes no warranties, express or implied, including any warranty as to merchantability or fitness for a particular purpose or use. Seller is not liable for and Purchaser waives any right of action it has or may have against Seller for any consequential or special damages arising out of any breach of warranty, and for any damages Purchaser may claim for damage to any property or injury or death to any person arising out of its purchase or the use, operation, or maintenance of the product. Seller will not be liable for any labor subcontracted or performed by Purchaser for preparation of warranted item for return to Seller's factory or for preparation work for field repair or replacement. Invoicing of Seller for labor either performed or subcontracted by Purchaser will not be considered as a liability by the Seller.

The liability of Seller hereunder is limited to replacing or repairing at Seller's factory or on the job site at Seller's option, any part or parts which have been returned to the Seller and which are defective or do not conform to such specifications, drawings or other written descriptions; provided that such part or parts are returned by the Ultimate Purchaser within ninety (90) days after such defect is discovered. The Seller shall have the sole right to determine if the parts are to be repaired at the job site or whether they are to be returned to the factory for repair or replacement. All items returned to Seller for repair or replacement must be sent freight, prepaid to its factory. Purchaser must obtain Seller's Return Goods Authorization prior to returning items. The above conditions must be met if warranty is to be valid. Seller will not be liable for any damage done by unauthorized repair work, unauthorized replacement parts, from any misapplication of the item, or for damage due to accident, abuse, or act of God.

This warranty shall be exclusive of any and all other warranties express or implied and may be modified only by writing signed by any officer of the Seller. This warranty shall extend to the Ultimate Purchaser but to no one else. Accessories supplied by Seller but manufactured by others carry any warranty the manufacturers have made to Seller and which can be passed on to the Ultimate Purchaser.

Seller makes no warranty with respect to whether the products sold hereunder infringe any patent, U.S. or foreign, and Purchaser represents that any specially ordered products do not infringe any patent. Purchaser agrees to indemnify and hold Seller harmless from any liability by virtue of any patent claims where Purchaser has ordered a product conforming to Purchaser's specifications, or conforming to Purchaser's specific design.

Purchaser has not relied and shall not rely on any oral representation regarding the Product sold hereunder and any oral representation shall not bind Seller and shall not be part of any warranty.

Contents

1	Product Overview	11
	Description	11
	LDRA6 Front Panel Indicators	12
	Zone LEDs	12
	Power LED	12
	Audible Alarm	12
	Quiet/Test/Reset Switch	12
2	Connections and Settings	15
	LDRA6 Board	15
	TB1 — Power	16
	POW1 — Power	16
	TB2, TB3 — Zone Inputs	16
	TB5, TB4 — Zone Alarm Relays	18
	TB6 — Summary Relay	19
	TB7 — RS485 Connection	19
	SW1— Relay and Alarm Function	20
	SW1, Position 1: Summary Relay Supervised/Unsupervised	20
	SW1, Position 2: Relays Latched/Unlatched	20
	SW1, Position 3: Zone Relay Linkage	20
	SW1, Position 4: Zone Relays Supervised / Unsupervised	20
	SW1, Position 5: Leak Alarm Delay	21
	SW1, Position 6: Ability to Silence Summary Relay	21
	SW1, Positions 7 and 8: Re-alarm Time	21
	SW2 — Modbus Addressing	21
	SW4 through SW9	22
	R1 — Leak Detection Cable Sensitivity Setting	23
3	Installation	25
	Before You Begin	25
	Connecting the Water Leak Detection Cable	25
	Secure the Cable to the Floor	26
	Recommended Cable Installation	27
	Apply Power to the Unit	28
	Power via Wall Adapter	28
	Power via Direct Line	28
4	EIA-232 Interface	29
	Boot-Up	29
	Displaying the Help Menu	30
	Function Commands	30
	c — Contact Closure Settings	30
	ld — Leak Delay Setting	31
	sens — Leak Zone Sensitivity	31
	e — View Eeprom Data	32
	er — Erase Eeprom Data — Restores Factory Defaults	32
	mbb — View / Change Modbus Baud Rate	32

mbp – View / Change Modbus Parity	32
mr – Reset Modbus Port and Statistics	32
m – View Modbus Port Settings and Statistics	33
t – Toggle Modbus Trace On/Off	33
z – Display Leak Zone Readings	33
sr – Summary Relay Mode	33
zr – zone relay mode	34
x – Exit to Bootloader	34
A Modbus Communications	35
Modbus Implementation of the LDRA6	35
Modes of Transmission	35
Slave Address Field	35
Function Field	36
Data Field	36
Error Check Field	36
Packet Communications for the LDRA6	36
Read Output Registers	36
Read Input Registers	37
Present Single Register	39
Present Multiple Registers	40
RTU Framing	41
Modbus Mirroring	42
B Troubleshooting	43
C Technical Specifications	45

Figures

1	Product Overview	11
	Figure 1.1 LDRA6 Front Panel Indicators	13
2	Connections and Settings	15
	Figure 2.1 LDRA6 Board	15
3	Installation	25
	Figure 3.1 Water Leak Detection Cable Interface	26
	Figure 3.2 SD-Z1 Spot Detector Interface	26
	Figure 3.3 Cable Installation Methods	27
	Figure 3.4 Wiring Diagram	28
4	EIA-232 Interface	29
A	Modbus Communications	35
B	Troubleshooting	43
C	Technical Specifications	45

Notes:

Tables

1	Product Overview	11
2	Connections and Settings	15
3	Installation	25
4	EIA-232 Interface	29
A	Modbus Communications	35
Table A.1	Read Output Registers Packet Structure	36
Table A.2	Output Registers	36
Table A.3	Read Input Registers Packet Structure	37
Table A.4	Input Registers	38
Table A.5	Status Flags (Register 30001)	38
Table A.6	Status Flags (Register 30008)	39
Table A.7	Preset Single Register Packet Structure	39
Table A.8	Present Multiple Registers Packet Structure	40
Table A.9	Modbus Slave Address	40
Table A.10	Query Sample	41
Table A.11	Response Sample	41
B	Troubleshooting	43
Table B.1	Troubleshooting Problems with the LDRA6	43
C	Technical Specifications	45
Table C.1	Technical Specifications	45

Notes:

PRODUCT OVERVIEW

1.1. Description

The LDRA6 is a complete monitoring system that detects and reports the presence of water and other conductive liquids, as well as monitors dry contact alarm points. The LDRA6 couples SeaHawk Water Leak Detection Cable (SC) with an advanced control head to monitor six individual zones. When a conductive liquid comes in contact with the SC or Spot Detectors (SD-Z/SD-Z1), an alarm sounds and the summary alarm relay and zone relay activate. The LED that corresponds with the appropriate zone also illuminates and an audible alarm is activated. Each LDRA6 input can also be configured to detect a dry contact's change of state (NO or NC) and annunciate the alarm on the front panel.

The LDRA6 is a supervised system - it continuously monitors the cable for leaks and cable integrity. A cable break causes a cable fault indication. An alarm sounds and the appropriate zone relay and the summary alarm relay activate. The appropriate LED changes to indicate a cable fault has occurred.

The dry contact relays in the LDRA6 may be configured as supervised or unsupervised (see section 2-2 for configuration options). Each zone can be configured with unique, individual settings. When the user specified alarm condition occurs, the LDRA6 activates the appropriate relay and alarm LED

Note The LDRA6 produces an alarm in the following conditions:

- ◆ Leak Detected
- ◆ Cable Fault
- ◆ Dry Contact Alarm Condition (User Specified)

1.2. LDRA6 Front Panel Indicators

1.2.1 Zone LEDs

One tri-color LED for each zone.

Default Leak Detection Cable Setting:

On solid and green for normal cable conditions.
Flashes quickly and turns red if a leak is detected in the zone.
Flashes quickly and turns yellow if a cable fault is detected in the zone.
On solid once an alarm is silenced.

Default Dry Contact Setting:

On solid and green for normal, non-alarm conditions.
Flashes quickly and turns red (by default) if an alarm condition is detected in the zone.
On solid once an alarm is silenced.

1.2.2 Power LED

On (green) as long as power is on.

1.2.3 Audible Alarm

Activates when an alarm condition is detected. Silenced with the Quiet/Test/Reset switch.

1.2.4 Quiet/Test/Reset Switch

During alarm, the audible alarm is silenced, and any LED(s) in alarm will glow solidly. If the alarm goes away, the LED(s) will flash slowly. Hold down the Quiet/Test/Reset switch to reset all alarms and complete and self test cycle. If any alarms still exist, the unit will not reset the corresponding zones.

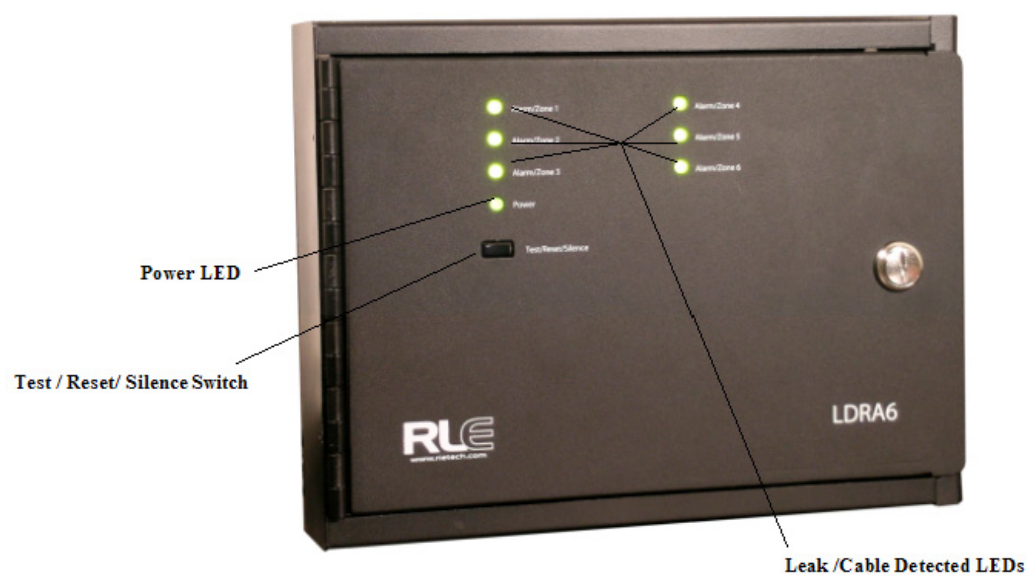


Figure 1.1 LDRA6 Front Panel Indicators

Notes:

CONNECTIONS AND SETTINGS

2.1. LDRA6 Board

The LDRA6's zone connectors, labeled TB2 and TB3, are found at the bottom of the right side of the board. The switches on the board labeled SW1 control some relay and alarm functionality. SW2 sets the Modbus station address. The unit has one dial, labeled R1, which is used to manually adjust the sensitivity for all zones. Sensitivity for individual zones may be configured through the LDRA6's EIA-232 Craft Port configuration, labeled P2. The switches for configuring Dry Contact or Leak Detection monitoring for zones are labeled SW4 through SW9.


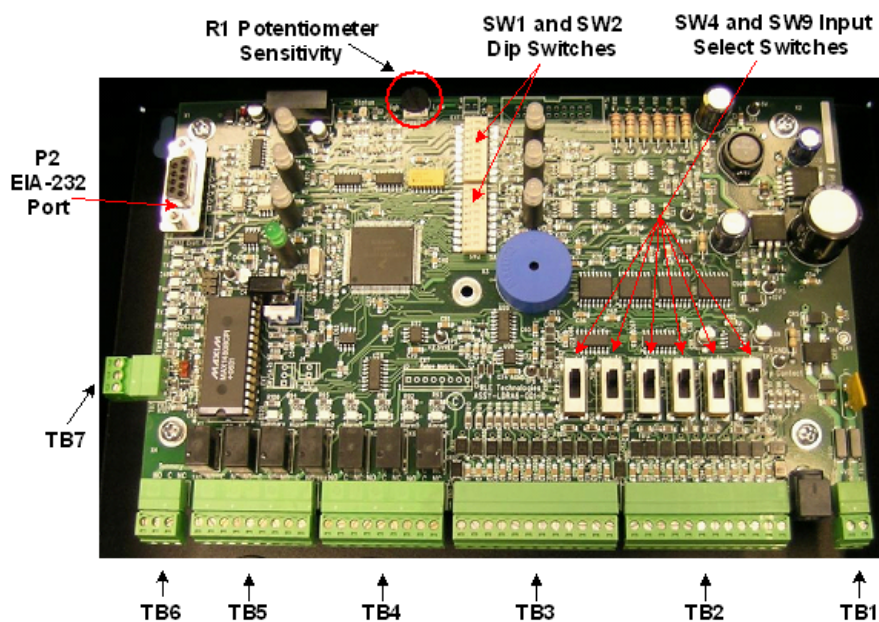


Figure 2.1 LDRA6 Board


2.1.1 TB1 -- Power

The LDRA6 connects to a 24VDC power supply using TB1, a two position connector labeled 24VDC.

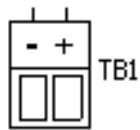


2.1.2 POW1 – Power

Power can also be supplied to the unit through POW1. This is a wall adapter plug connection. This also requires 24VDC.

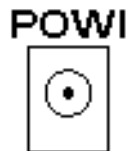

2.1.3 TB2, TB3 – Zone Inputs


SeaHawk Leak Detection Sensing Cable (SC) and dry contact wires connect to the LDRA6 through TB2. A leader cable from the leader cable kit, part #LC-KIT is required for leak detection cable connections. Dry contact wires must be user supplied or may be supplied with your dry contact device. Connect cables and wires as follows:

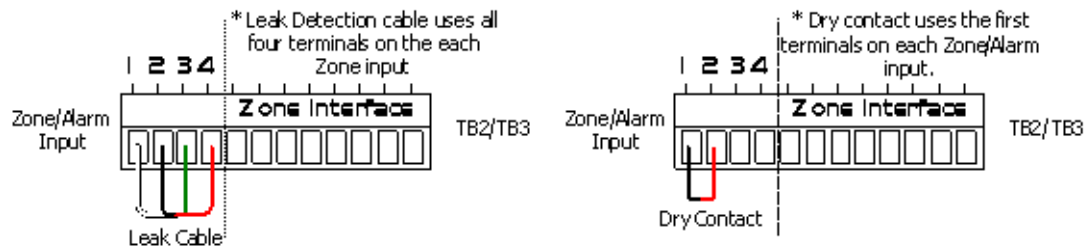

Position Leak Detection Cable		Dry Contact Wire
TB3-1	Zone 1 White	Zone 1 Input-1
TB3-2	Zone 1 Black	Zone 1 Input-2
TB3-3	Zone 1 Green	N/A
TB3-4	Zone 1 Red	N/A
TB3-5	Zone 2 White	Zone 2 Input-1
TB3-6	Zone 2 Black	Zone 2 Input-2
TB3-7	Zone 2 Green	N/A
TB3-8	Zone 2 Red	N/A
TB3-9	Zone 3 White	Zone 3 Input-1
TB3-10	Zone 3 Black	Zone 3 Input-2
TB3-11	Zone 3 Green	N/A
TB3-12	Zone 3 Red	N/A
TB2-1	Zone 4 White	Zone 4 Input-1
TB2-2	Zone 4 Black	Zone 4 Input-2
TB2-3	Zone 4 Green	N/A
TB2-4	Zone 4 Red	N/A
TB2-5	Zone 5 White	Zone 5 Input-1
TB2-6	Zone 5 Black	Zone 5 Input-2
TB2-7	Zone 5 Green	N/A
TB2-8	Zone 5 Red	N/A
TB2-9	Zone 6 White	Zone 6 Input-1
TB2-10	Zone 6 Black	Zone 6 Input-2
TB2-11	Zone 6 Green	N/A
TB2012	Zone 6 Red	N/S

2.1.4 TB5, TB4 – Zone Alarm Relays

These are the Zone Alarm Relay output terminal blocks (Form C). A status LED is located above each relay, which will indicate the state of the relay (on/off). These relays can be configured as supervised or unsupervised, latched or unlatched (unsupervised and unlatched by factory default). Connect the Zone Alarm Relay wires to TB3 and TB4 as follows:

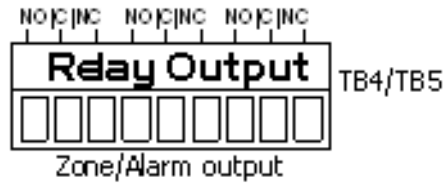

TB5-1 Zone 1 alarm relay normally open (NO)
 TB5-2 Zone 1 alarm relay common (C)
 TB5-3 Zone 1 alarm relay normally closed (NC)

TB5-4 Zone 2 alarm relay normally open (NO)
 TB5-5 Zone 2 alarm relay common (C)
 TB5-6 Zone 2 alarm relay normally closed (NC)

TB5-7 Zone 3 alarm relay normally open (NO)
 TB5-8 Zone 3 alarm relay common (C)
 TB5-9 Zone 3 alarm relay normally closed (NC)


TB4-1 Zone 4 alarm relay normally open (NO)
 TB4-2 Zone 4 alarm relay common (C)
 TB4-3 Zone 4 alarm relay normally closed (NC)

TB4-4 Zone 5 alarm relay normally open (NO)
 TB4-5 Zone 5 alarm relay common (C)
 TB4-6 Zone 5 alarm relay normally closed (NC)

TB4-7 Zone 6 alarm relay normally open (NO)
 TB4-8 Zone 6 alarm relay common (C)
 TB4-9 Zone 6 alarm relay normally closed (NC)

2.1.5 TB6 – Summary Relay


This is the Summary Relay output terminal block (Form C). A status LED is located to the right of the relay, which will indicate the state of the relay (on/off). This relay can be configured as supervised or unsupervised, latched or unlatched. Connect the Summary Relay wires to TB5 as follows:

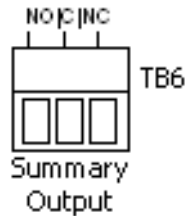

- TB6-1 Summary alarm normally open (NO)
- TB6-2 Summary alarm common (C)
- TB6-3 Summary alarm normally closed (NC)

2.1.6 TB7 – RS485 Connection

The LDRA6 can communicate with other devices through the RS485 terminal block. Wire as follows:

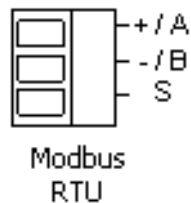

- TB7-1 + or A wire
- TB7-2 - or B wire
- TB7-3 Shield or GND wire

2.2. SW1– Relay and Alarm Function

2.2.1 SW1, Position 1: Summary Relay Supervised/Unsupervised

The SW1, position 1 configures the Summary Alarm relay as supervised or unsupervised. If a relay is supervised, the relay picks until power goes off or until an alarm is detected. The alarm then releases to announce a change in state. An unsupervised relay picks only when an alarm is detected.

- 1 = Supervised
- 0 = Unsupervised (factory default)

2.2.2 SW1, Position 2: Relays Latched/Unlatched

The SW1, position 2 configures all relays as latched or unlatched. If a relay is latched, the relay will remain in an alarm condition until the Reset switch is pressed. If a relay is unlatched, the relay will remain in alarm until either the Reset switch is pressed, or the condition that tripped the relay goes away.

- 1 = Latched
- 0 = Unlatched (factory default)

2.2.3 SW1, Position 3: Zone Relay Linkage

The SW1, position 3 configures all Zone Alarm Relays to link together and pick simultaneously upon alarm. When this switch is turned on, if a zone goes into alarm, all six zone alarm relays and the summary alarm relay will pick. When this switch is turned off, if a zone goes into alarm, only the zone alarm relay for the zone that is in alarm and the summary alarm relay will pick.

- 1 = Individual Zone Alarm Relays Linked
- 0 = Individual Zone Alarm Relays Not Linked (factory default)

2.2.4 SW1, Position 4: Zone Relays Supervised / Unsupervised

The SW1, position 4 configures the individual Zone Alarm Relays as supervised or unsupervised. If a relay is supervised, the relay picks until power goes off or until an alarm is detected. The alarm then releases to announce a change in state. An unsupervised relay picks only when an alarm is detected.

- 1 = Supervised
- 0 = Unsupervised (factory default)

2.2.5 SW1, Position 5: Leak Alarm Delay

The SW1, position 5 switch designates the unit's leak delay time. Setting this switch to "off" delays the default leak alarm by 15 seconds. Setting this switch to 'on' designates the leak alarm delay to use the value specified through the unit's craft port.

- 1 = Leak Alarm Delay set through Craft Port
- 0 = Leak Alarm Delay set at 15 seconds (factory default)

2.2.6 SW1, Position 6: Ability to Silence Summary Relay

The SW1, position 6 switch gives the Summary Alarm Relay the option of being silenced or not. If the Summary Alarm Relay can be silenced, the relay returns to normal when the Quiet/Test/Reset button is pressed. If the Summary Alarm Relay can not be silenced, the relay stays picked until the alarm condition is cleared.

- 1 = Summary Alarm Relay is able to be silenced
- 0 = Summary Alarm Relay is not able to be silenced (factory default)

2.2.7 SW1, Positions 7 and 8: Re-alarm Time

The SW1, position 7 and 8 configures the unit's re-alarm time. Set the switches as below for desired (approximate) re-alarm times:

- 1 1 = 24 hours
- 0 1 = 16 hours
- 1 0 = 8 hours
- 0 0 = Disabled; no re-alarms once silenced (factory default)

2.3. SW2 – Modbus Addressing


The SW2, configures the unit's EIA-485 address. The unit's address is set in bits and can range from 00000001 to 11111110 (1-254 in decimal notation).

- 00000000 = No Address (factory default)
- 00000001 = 1
- 00000010 = 2
- 00000011 = 3
- ...
- 11111101 = 253
- 11111110 = 254


2.4. SW4 through SW9

SW4 through SW9 configure each zone as a Leak Detection Cable input or a Dry Contact input. If configured as a Leak Detection Cable input, the zone requires a 4-wire leak detection cable (SC) to monitor. If configured as a Dry Contact input, the zone requires a 2-wire dry contact device to monitor. If any zone is not desired to be used, set the zone to Dry Contact and normally open (factory default) to avoid unwanted alarms.

SW4 Up	=	Zone 1 is a Dry Contact input
SW4 Down	=	Zone 1 is a Leak Detection input
SW5 Up	=	Zone 2 is a Dry Contact input
SW5 Down	=	Zone 2 is a Leak Detection input
SW6 Up	=	Zone 3 is a Dry Contact input
SW6 Down	=	Zone 3 is a Leak Detection input
SW7 Up	=	Zone 4 is a Dry Contact input
SW7 Down	=	Zone 4 is a Leak Detection input
SW8 Up	=	Zone 5 is a Dry Contact input
SW8 Down	=	Zone 5 is a Leak Detection input
SW9 Up	=	Zone 6 is a Dry Contact input
SW9 Down	=	Zone 6 is a Leak Detection input

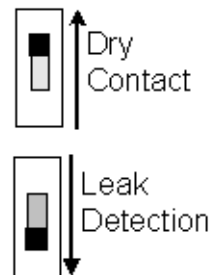


**SW4 and SW9 Input
Select Switches**

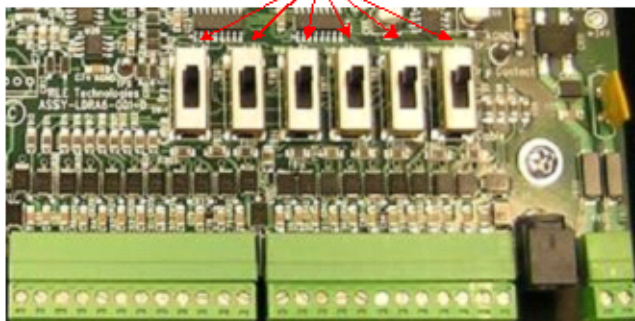

2.5. R1 – Leak Detection Cable Sensitivity Setting

This potentiometer allows users to manually adjust the sensitivity setting for all six zones. Turn the dial clockwise to make the zone less sensitive. This means a leak will be reported in that zone when a large amount of water is present. Turn the dial counterclockwise to make the zone more sensitive. This means a leak will be reported for the zone when a small amount of water is present.

This potentiometer can be overridden through the LDRA6's craft port configuration for individual zones (*see 4.3.3, "sens – Leak Zone Sensitivity" on page 31 for details*).

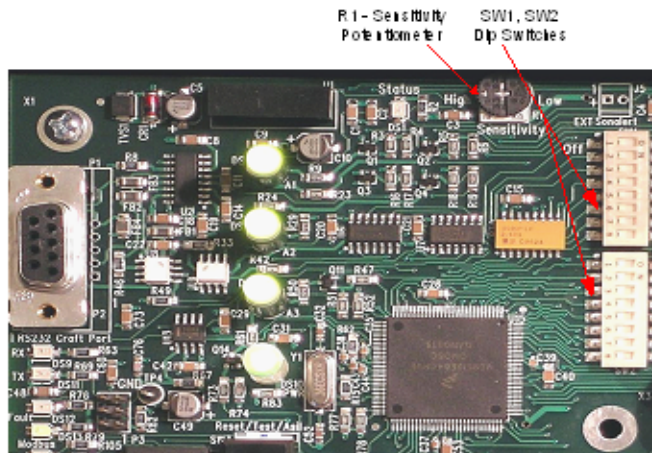

Notes:

INSTALLATION

3.1. Before You Begin

The LDRA6 is a wall mounted device. To secure the device to the wall, first open the door of the enclosure. There are knockouts on the top and bottom of the enclosure. Remove as many as necessary. Use drywall anchors and the holes in the back of the enclosure to secure the unit to the wall.

3.2. Connecting the Water Leak Detection Cable

A leader cable kit (part #LC-KIT) is required per zone to connect the LDRA6 to SeaHawk Leak Detection Cable (SC). A leader cable is included in each LC-KIT; one end of this leader cable connects into the LDRA6. This end of the cable is finished with stripped, bare wires. The other end features a mating connector which connects with the SC. The end of the cable zone requires a removable end terminator (EOL) which is also included in a leader cable kit (LC-KIT).

Note A Leader Cable Kit (part #LC-KIT) is required per zone to connect the LDRA6 to SeaHawk Leak Detection Cable (SC). Each LC-KIT includes a 15 foot (4.57m) leader cable and an EOL terminator. The kits are NOT included with the LDRA6, and can be purchased separately.

To connect the leader cable to the LDRA6, connect the wires (4) to the appropriate zone position of the terminal block connectors (see section 2.1.3, “TB2, TB3 – Zone Inputs” on page 16 for more wiring details). Adjust the appropriate zone configuration for Leak Detection input (see section 2.4., “SW4 through SW9” on page 22 for more details).

Once the leader cable is plugged into the terminal block, it is ready to be connected to the SC. To do this, unscrew the EOL terminator from the end of the leader cable. Attach the first length of SC to the leader cable. Route the SC according to the cable layout diagram, if provided. Lay the cable according to Figure 3.1 and 3.2.1, “Secure the Cable to the Floor” on page 26. Secure the EOL terminator on the unoccupied end of the SC.

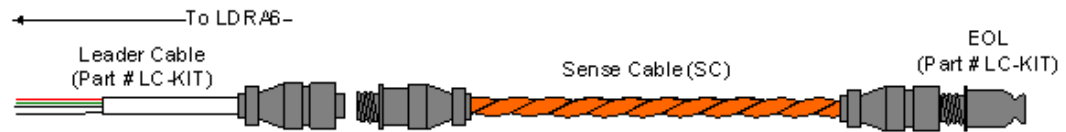


Figure 3.1 Water Leak Detection Cable Interface

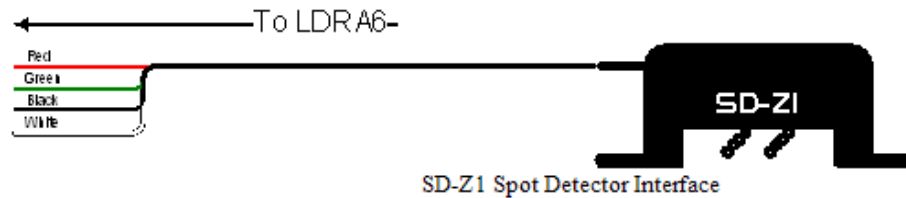


Figure 3.2 SD-Z1 Spot Detector Interface

The SD-Z1 connects to the LDRA6 similar as the LC-Kit. One SD-Z1 is designed to connect to each Zone input on the LDRA6. If multiple points are need to be monitored on one zone input, it is recommended to use the SD-Z style spot detector which connects together in series for multiple detection points.

3.2.1 Secure the Cable to the Floor

Secure the cable to the floor with either J-clips (part #JC) or one of the other approved methods shown in Figure 3-2. J-clips are the manufacturer's recommended installation method.

§ Place one J-clip every three feet along the length of the SC. Place one J-clip at each turn of the cable.

§ If the cable is installed over an obstruction, clip the cable on both sides, as close to the obstruction as possible.

§ Do not install the cable directly in front of an air conditioner. Allow a minimum of 6 feet (1.83m) between the unit and the cable. If the SC is too close to the air conditioning unit's air stream, the moisture from the humidifier may cause false leak readings. If the cable must be installed in front of an air conditioning unit, place the J-clips 12 to 18 inches (.305m to .457m) apart.

Note It is important to finish the end of the SeaHawk Leak Detection Cable (SC) with the end-of-line terminator (EOL). If the EOL terminator is not present, a cable fault will register. Note any variances between the cable layout diagram and the actual cable installation. Wait approximately one minute. No alarm should be present.

3.2.2 Recommended Cable Installation



Figure 3.3 Cable Installation Methods

3.3. Apply Power to the Unit

Once cable for all the desired leak detection zones has been connected to the unit, power may be applied. The LDRA6 operates on 24VDC power supplied by a wall adapter or a direct line. A power supply should be run to the location of the unit.

3.3.1 Power via Wall Adapter

The LDRA6 can be powered by a wall adapter. Before connecting the wall adapter to the LDRA6, unplug the adapter from the wall. If the adapter has a connector on the end, feed the cord through one of the knockouts in the enclosure and plug it directly into the 24VDC receptacle located at POW1. Plug the other end of the adapter into the wall. The LDRA6 should power up immediately.

3.3.2 Power via Direct Line

If the adapter does not have a connector on the end, strip the end of the adapter line so the two wires inside are exposed. Strip the end of each of the two wires and feed them into the enclosure. Insert the two wires into the terminal block labeled TB1. The minus, or ground, wire is placed into the right opening in the terminal block. The plus, or live, wire is placed into the left opening in the terminal block.

Once all the wires have been placed inside the terminal block, tighten the three screws across the bottom of the terminal block until the wires are securely held in place. Plug the other end of the wall adapter into the wall. The LDRA6 should power up immediately.

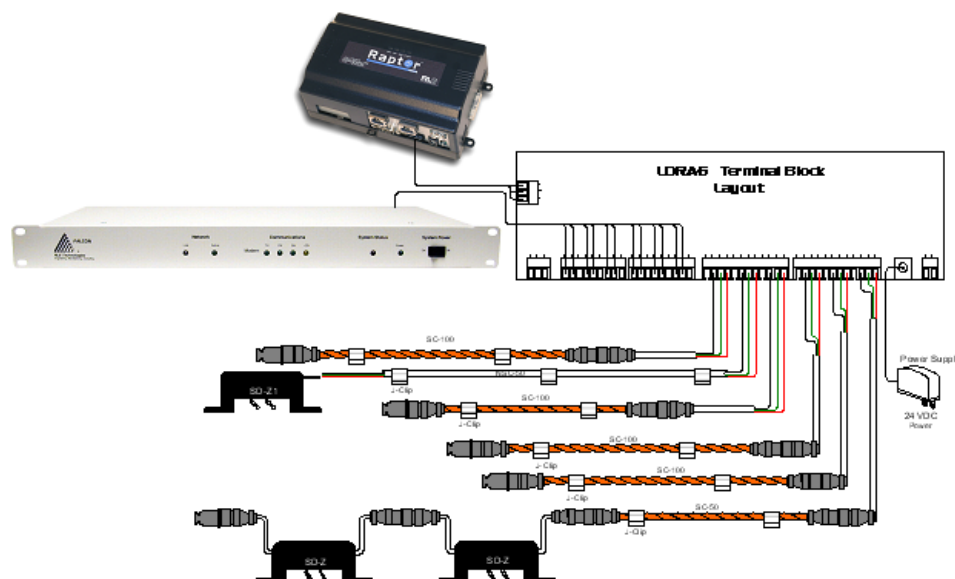


Figure 3.4 Wiring Diagram

EIA-232 INTERFACE

4.1. Boot-Up

Make sure the EIA-232 port is connected to a PC or terminal with a straight through cable. When the LDRA6 is powered up, the boot ROM and flash program code are verified. Output similar to the screen displayed below should appear on the terminal or terminal emulation software.

```
LDZ/Rasp6 Bootloader - LDZ6BOOT V2.1
Firmware Prgm Id: LDZ6/RASP6 V2.1
checksum valid

LDZ/Rasp6 bootup
LDZ6/RASP6 V2.1
Reading EEprom.....
..... ok
Modbus Addr:0 9600,8,N,1
```

4.2. Displaying the Help Menu

Once the system reaches this point, type? and press **Enter** to display the Help Menu. The Help Menu lists the function commands for the LDRA6.

```

Help Menu - LD26/RASP6 V2.1
c   - view/change CC settings
ld  - view/change leak delay
sens - view/change leak zone sensitivity
e   - view eeprom data
er  - erase eeprom data - restores factory defaults
mbb - change modbus baud rate
mbp - change modbus parity
mr  - reset modbus port/statistics
m   - view modbus port settings/statistics
t   - toggle modbus trace on/off
z   - display leak zone readings
sr  - summary relay mode
zr  - zone relay mode
x   - exit to bootloader

```

4.3. Function Commands

4.3.1 c – Contact Closure Settings

c displays the current contact closure settings for each zone. To adjust a zone's configuration, use the following format: **cX/type/offcolor/oncolor/delay**.

- ◆ **X** is the zone number and can range from 1-6 for each input.
- ◆ **type** is the contact closure setting; use "no" for normally open, "nc" for normally closed, or "st" for a status point.
- ◆ **off-color** is the normal condition (non-alarm) LED color.
- ◆ **on color** is the alarm condition LED color.
- ◆ The colors for LEDs can be green, yellow or red.
- ◆ **delay** is the number of seconds the alarm must be active before annunciated and can range from 0 to 999 seconds.

```

** 1: CC / 2: CC / 3: CC / 4: CC / 5: CC / 6: CC **
cX/type/offcolor/oncolor/delay
c1/no/green/red/0
c2/no/green/red/0
c3/no/green/red/0
c4/no/green/red/0
c5/no/green/red/0
c6/no/green/red/0

```

4.3.2 Id – Leak Delay Setting

Id displays the current leak alarm delay in seconds. This is the number of seconds the leak alarm must be detected before annunciated. The leak alarm delay can range from 0 to 999 seconds.

Use the format **Id/x** where x is the number of seconds for the leak alarm delay.

This value applies to all zones configured for Leak Detection. SW1 position 5 determines if this RS232 configured value is used (see section 2.2.5, “SW1, Position 5: Leak Alarm Delay” on page 21).

4.3.3 sens – Leak Zone Sensitivity

sens displays the current leak detection sensitivity settings for each zone. The first value displayed is the value read from R1, the sensitivity dial on the LDRA6 board. Each zone is displayed in the format **x: yyy/zzz**, where x is the zone, yyy is the value currently being used for sensitivity (*in micro amps read by the sensing cable, yyy can range from 25 to 300*), and zzz is the manually entered value through the craft port (*factory default is 0*). Values shown below uses sensitivity set to High (*fully counterclockwise*).

```
Pot: 25 1:25/0 2:25/0 3:25/0 4:25/0 5:25/0 6:25/0
```

To override the manual sensitivity dial setting, enter a new value for each desired zone. Using a value of 0 will enable desired zone to use manual sensitivity dial setting. Use the format **sensX/yyy** to override a zone's setting. Example: **sens1:300** sets Zone 1 to a sensitivity of 300 micro amps. Type **sens** and press Enter again to viewing the Leak Zone Sensitivity settings after entering new value displays the following:

```
Pot:25 1:300/300 2:25/0 3:25/0 4:25/0 5:25/0 6:25/0
```

4.3.4 e – View Eeprom Data

This function is a reserved command used for advanced diagnostic purposes only.

4.3.5 er – Erase Eeprom Data – Restores Factory Defaults

er will erase all RS232 configured settings and restore them all to factory default values.

4.3.6 mbb – View / Change Modbus Baud Rate

mbb will display modbus address, baud rate, data bits, parity, and stop bits. Default values are displayed below.

```
Modbus Addr:0 9600,8,N,1
```

To change modbus baud rate, use the format **mbb/xxxx** where xxxx is the baud rate. Valid selections for baud rate are 1200, 2400, 9600 and 19200.

4.3.7 mbp – View / Change Modbus Parity

mbp will display modbus address, baud rate, data bits, parity, and stop bits. Default values are displayed below.

```
Modbus Addr:0 9600,8,N,1
```

To change modbus parity rate, use the format **mbp/x** where x is the parity. Valid selections for parity are:

- ◆ e – even
- ◆ o – odd
- ◆ n – none

4.3.8 mr – Reset Modbus Port and Statistics

mr will reset all RS485 Modbus counters.

4.3.9 m – View Modbus Port Settings and Statistics

m will display the current EIA-485 Modbus port settings and logged statistics. Initial values appear as:

```
Modbus Addr:0 9600,8,N,1
overruns:      0
parity_errors:  0
noise_errors:   0
framing_errors: 0
inpackets:      0
crc_errors:     0
for me:         0
not for me:     0
```

4.3.10 t – Toggle Modbus Trace On/Off

t will toggle Modbus tracing with packet viewing from the EIA-485 port over the EIA-232 port. This is a command for advanced diagnostic purposes only.

4.3.11 z – Display Leak Zone Readings

z will display the present Leak Detection Cable readings. The Leak Zone table will display the reading for each leg of cable and the present leakage current reading for each zone.

```
Z1: Leg1: 0    Leg2: 0    Leakage: 0
Z2: Leg1: 0    Leg2: 0    Leakage: 0
Z3: Leg1: 0    Leg2: 0    Leakage: 0
Z4: Leg1: 0    Leg2: 0    Leakage: 0
Z5: Leg1: 0    Leg2: 0    Leakage: 0
Z6: Leg1: 0    Leg2: 0    Leakage: 0
```

4.3.12 sr – Summary Relay Mode

sr will display the current configuration of the summary relay. You can select the summary relay to either change state on leak/fault or just a fault condition. Enter, sr <space> summary for notification on a leak/fault condition. Enter, sr <space> fault for notification on a fault condition.

```
sr
sr/summary (summary/fault)
sr fault
sr/fault (summary/fault)
```

4.3.13 zr – zone relay mode

zr will display the current configuration of the zone relays. You can select the zone relays to either change state on leak/fault (summary) or just a leak condition. Enter, **zr <space> summary** for notification on a leak/fault condition. Enter, **zr <space> leak** for notification on a leak condition.

```
zr
zr/summary (summary/leak)
zr leak
zr/leak (summary/leak)
```

4.3.14 x – Exit to Bootloader

x will exit the application code and only the bootloader will be running.



MODBUS COMMUNICATIONS

This document describes the Modbus communications protocol as supported by the LDRA6. It includes details and information on how to configure the LDRA6 for communications via Modbus network.

A.1. Modbus Implementation of the LDRA6

The LDRA6 is capable of communicating via the half-duplex EIA-485 serial communication standard. The LDRA6 is configured to act as a slave device on a common network. The EIA-485 medium allows for multiple devices on a multi-drop network. The LDRA6 is a slave only device and will never initiate a communications sequence.

A.1.1 Modes of Transmission

The Modbus protocol uses ASCII and RTU modes of transmission. The LDRA6 supports only the RTU mode of transmission, with 8 data bits, even, odd or no parity and one stop bit.

Every Modbus packet consists of four fields:

- ◆ Slave Address Field
- ◆ Function Field
- ◆ Data Field
- ◆ Error Check Field (Checksum)

A.1.1.1 Slave Address Field

The slave address field is one byte in length and identifies the slave device involved in the transaction. Valid address range is between 1 and 254. SW2 on the LDRA6 board sets the address. The firmware program constantly reads dip SW2. Any changes are updated on the fly. Close the SW2 positions that correspond to the binary number of the address.

A.1.1.2 Function Field

The function field tells the LDRA6 which function to perform. Function codes are designed to invoke a specific action by the LDRA6.

A.1.1.3 Data Field

The data field varies in length depending on whether the message is a request or a response to a packet. This field typically contains information required by the LDRA6 to perform the command specified or to pass back data to the master device.

A.1.1.4 Error Check Field

The error check field consists of a 16-bit (2 byte) Cyclical Redundancy Check (CRC16). It allows the LDRA6 to detect a packet that has been corrupted with transmission errors.

A.2. Packet Communications for the LDRA6

A.2.1 Read Output Registers

To read the LDRA6 parameter values, the master must send a Read Output Registers request packet. The Read Output Registers request packet specifies a start register and the number of registers to read. The start register is numbered from zero (40001 = zero, 40002 = one, etc.).

Table A.1 Read Output Registers Packet Structure

Read Registers Request Packet	Read Registers Response Packet
Slave Address (1 byte)	Slave Address (1 byte)
03 (Function code) (1 byte)	03 (function code) (1 byte)
Start Register (2 bytes)	Byte count (1 byte)
# of registers to read (2 bytes)	First register (2 bytes)
Crc Checksum (2 bytes)	Second register (2 bytes)
	...
	Crc Checksum (2 bytes)

Table A.2 Output Registers

Register	Name	Description	Units	Range
40001	Leak Threshold Zone 1	Trip current for leak alarm	μAmps	0-65535
40002	Leak Threshold Zone 2	Trip current for leak alarm	μAmps	0-65535
40003	Leak Threshold Zone 3	Trip current for leak alarm	μAmps	0-65535

Table A.2 Output Registers (continued)

Register	Name	Description	Units	Range
40004	Leak Threshold Zone 4	Trip current for leak alarm	μAmps	0-65535
40005	Leak Threshold Zone 5	Trip current for leak alarm	μAmps	0-65535
40006	Leak Threshold Zone 6	Trip current for leak alarm	μAmps	0-65535
40007	Reserved			
40008	Reserved			
40009	Reserved			
40010	Silence Alarm	Set to 1 to silence audible alarm	1 = Silence	0-65535
40011	Reset Alarm	Set to 1 to reset alarms	1 = Reset Alarm	0-65535
40012	Reserved			
40013	Reserved			
40014	Reserved			
40015	Reserved			
40016	Reserved			
40017	Reserved			

A.2.2 Read Input Registers

To read the LDRA6 input values, the master must send a Read Input Registers request packet. The Read Input Registers request packet specifies a start register and the number of registers to read. The start register is numbered from zero (30001 = zero, 30002 = one, etc.).

Table A.3 Read Input Registers Packet Structure

Read Registers Request Packet	Read Registers Response Packet
Slave Address (1 byte)	Slave Address (1 byte)
04 (Function code) (1Byte)	04 (Function code) (1 byte)
Start Register *2 bytes)	Byte count (1 byte)
# of register to read (2 bytes)	First register (2 bytes)
Crc Checksum (2 bytes)	Second register (2 bytes)
	...
	Crc Checksum (2 bytes)

Table A.4 Input Registers

Register	Name	Description	Units	Range
30001	Status	Bit Level Status (see Table 5)	None	0-65535
30002	Leak Current Zone 1	Leakage current on cable	μAmps	0-65535
30003	Leak Current Zone 2	Leakage current on cable	μAmps	0-65535
30004	Leak Current Zone 3	Leakage current on cable	μAmps	0-65535
30005	Leak Current Zone 4	Leakage current on cable	μAmps	0-65535
30006	Leak Current Zone 5	Leakage current on cable	μAmps	0-65535
30007	Leak Current Zone 6	Leakage current on cable	μAmps	0-65535
30008	Input Selection	Bit Level Status (see Table 6)	None	0-65535
30009	Reserved			
30010	Version	Firmware version	xx.xx X 100	0-65535

Table A.5 Status Flags (Register 30001)

Bit	Read Registers Response Packet
00	1 = Zone 1: Leak is Detected / Contact Closure Alarm
01	1 = Zone 2: Leak is Detected / Contact Closure Alarm
02	1 = Zone 3: Leak is Detected / Contact Closure Alarm
03	1 = Zone 4: Leak is Detected / Contact Closure Alarm
04	1 = Zone 5: Leak is Detected / Contact Closure Alarm
05	1 = Zone 6: Leak is Detected / Contact Closure Alarm
06	0
07	0
08	1 = Zone 1 Cable Break Alarm
09	1 = Zone 2 Cable Break Alarm
10	1 = Zone 3 Cable Break Alarm
11	1 = Zone 4 Cable Break Alarm
12	1 = Zone 5 Cable Break Alarm
13	1 = Zone 6 Cable Break Alarm

Table A.5 Status Flags (Register 30001) (continued)

Bit	Read Registers Response Packet
14	0
15	0

Table A.6 Status Flags (Register 30008)

Bit	Read Registers Response Packet
00	0 = Zone 1 Configured for Leak Detection / 1 = Zone 1 Configured for Dry Contact
01	0 = Zone 2 Configured for Leak Detection / 1 = Zone 2 Configured for Dry Contact
02	0 = Zone 3 Configured for Leak Detection / 1 = Zone 3 Configured for Dry Contact
03	0 = Zone 4 Configured for Leak Detection / 1 = Zone 4 Configured for Dry Contact
04	0 = Zone 5 Configured for Leak Detection / 1 = Zone 5 Configured for Dry Contact
05	0 = Zone 6 Configured for Leak Detection / 1 = Zone 6 Configured for Dry Contact
06-15	0

A.2.3 Present Single Register

To set a LDRA6 parameter value, the master must send a Preset Single Register request packet. The Preset Single Register request packet specifies a register and the data to write to that register. The register is numbered from zero (40001 = zero, 40002 = one, etc.).

Table A.7 Preset Single Register Packet Structure

Preset Registers Request Packet	Preset Registers Response Packet
Slave Address (1 byte)	Slave Address (1 byte)
06 (*Function code) (1 byte)	06 (Function code) (1 byte)
Register (2 bytes)	Register (2 bytes)
Data (2 bytes)	Data (2 bytes)
Crc Checksum (2 bytes)	Crc Checksum (2 bytes)

A.2.4 Present Multiple Registers

To set multiple LDRA6 parameter values, the master must send a Preset Multiple Registers request packet. The Preset Multiple Register request packet specifies a starting register, the number of registers, a byte count and the data to write to the registers. The register is numbered from zero (40001 = zero, 40002 = one, etc.).

Table A.8 Present Multiple Registers Packet Structure

Preset Registers Request Packet	Preset Registers Response Packet
Slave Address (1 byte)	Slave Address (1 byte)
16 (Function code) (1 byte)	16 (Function code) (1 byte)
Start Register (2 bytes)	Start Register (2 bytes)
# of registers to write (2 bytes)	# of registers (2 bytes)
Byte Count (1 byte)	Crc Checksum (2 bytes)
Data (2 bytes)	
...	
...	
Crc Checksum (2 bytes)	

Table A.9 Modbus Slave Address

Address SW2 (1..8)		Address SW2 (1..8)		Address SW2 (1..8)		Address SW2 (1..8)	
0	00000000	16	00010000	32	00100000	48	00110000
1	00000001	17	00010001	33	00100001	49	00110001
2	00000010	18	00010010	34	00100010	50	00110010
3	00000011	19	00010011	35	00100011	51	00110011
4	00000100	20	00010100	36	00100100	52	00110100
5	00000101	21	00010101	37	00100101	53	00110101
6	00000110	22	00010110	38	00100110	54	00110110
7	00000111	23	00010111	39	00100111	55	00110111
8	00001000	24	00011000	40	00101000	56	00111000
9	00001001	25	00011001	41	00101001	57	00111001
10	00001010	26	00011010	42	00101010	58	00111010
11	00001011	27	00011011	43	00101011	59	00111011
12	00001100	28	00011100	44	00101100	60	00111100
13	00001101	29	00011101	45	00101101	61	00111101
14	00001110	30	00011110	46	00101110	62	00111110
15	00001111	31	00011111	47	00101111	63	00111111

- ◆ For address's 64-127, set SW1-7 to on, then subtract 64 from the address and use the table.
- ◆ For address's 128-191, set SW1-7 to off, #8 to on, then subtract 128 from the address and use the table.
- ◆ For address's 192-254, set SW1-7 & 8 to on, then subtract 192 from the address and use the table.

A.3. RTU Framing

The example below shows a typical Query/Response from a LDRA6 module.

Table A.10 Query Sample

Slave Address	Functions Code	Starting Register "Msb"	Starting Register "Lsb"	Number of Registers "Msb"	Number of Registers "Lsb"	CRC 16 "Lsb"	CRC 16 "Msb"
02	03	00	32	00	03	E5	FA

Table A.11 Response Sample

Slave Address	Function Code	Count Bytes of Data	Register Data Msb Lsb	Register Data Msb Lsb	Register Data Msb Lsb	CRC 16 "Lsb"	CRC 16 "Msb"
02	03	06	01 58	00 FA	00 54	1B	0D

- ◆ Slave address 2 responds to Function Code 3 with 6 bytes of hexadecimal data and ends with CRC16 checksum.

Register Values:

40051 =	0158	(hex)	=	344	(decimal)
40052 =	00FA	(hex)	=	250	(decimal)
40053 =	0054	(hex)	=	84	(decimal)

A.4. Modbus Mirroring

To use the EIA-485 Modbus mirroring feature set the address on the master LDRA6 to address 255 and then set the address on the slave LDRA6 to 1. The Master unit will then repeat (mirror) any zone alarms that come into the Slave Unit. When using this feature none of the local Alarm/Zone inputs will work on the Master unit, The Master unit is only a repeater for the single slave unit being used.

B

TROUBLESHOOTING

Table B.1 Troubleshooting Problems with the LDRA6

Problem	Action
No Power <i>Power On LED is Not On</i>	Check Power Supply Check for supply power at TB1 pins 1 and 2 on the bottom right hand corner of PCB. 1 If power is not present at TB1 pins 1 and 2, check DC input voltage to wall adapter, if used. 2 If power is not present at TB1 pins 1 and 2, check DC voltage at DC supply source distribution panel. 3 If voltage (power) is present at TB1, please contact RLE Technologies.

Table B.1 Troubleshooting Problems with the LDRA6 (continued)

Problem	Action
Cable Fault on Zone(s)	Check for Proper Wiring to Zone Terminal Block Wiring order should be as follows from left to right for each leak detection zone: <i>White, Black, Green</i> and <i>Red</i>. 1 If wiring order is correct, disconnect the End-of-Line terminator (EOL) from the end of the orange SC. Then connect the EOL terminator to the end of the leader cable (non-sensing). Hold down Quiet/Test/Reset for two seconds to reset control head. 2 If the cable fault condition goes away, there is a faulty or damaged section of orange SC. 3 If the fault condition does not clear, remove the respective zone terminal block and remove the input wires from the leader cable. Install a jumper wire between pins 1 and 2, and another jumper wire between pins 3 and 4. 4 If condition still exists, please contact RLE Technologies for extra support. If the condition clears, the leader cable or EOL terminator is faulty (open wire(s)).
Leak Detected on Zone(s)	Be sure there is No Water Present on or around the Zone in Alarm 1 If water is present, dry affected area and reset the controller. If the condition does not clear follow the step below. 2 Remove the End-of-Line terminator (EOL) from the end of the orange SC and install it onto the end of the leader cable. If the condition clears, there is a water leak or damage to the sense cable. Start moving the EOL terminator to the end of each cable section until the water-detected fault reoccurs. If the condition is still present once the EOL terminator has been placed on the end of the leader cable, follow the step below. 3 Disconnect the proper terminal block from the zone in alarm. Place a jumper wire between pins 1 and 2, and place a jumper wire between pins 3 and 4. Plug the terminal block back into the proper socket and push reset on the control head. If the condition is corrected, there is a problem with the leader cable. If the water leak condition is still present, contact RLE Technologies for support.

Note Contamination and/or physical damage to the cable is not covered under warranty. For all other troubleshooting concerns and questions regarding this product, contact RLE Technologies at 970-484-6510 or go to our website at www.rletech.com.



TECHNICAL SPECIFICATIONS

Table C.1 Technical Specifications

Power		24VAC Isolated @ 600mA max., 50/60Hz 24VDC @ 600mA max.; requires power supply: PSWA-DC-24 (not included)
Inputs		
	Leak Detection Cable	Compatible with SeaHawk sensing cable (not included) or SeaHawk spot detectors (SD-Z and SD-Z1 only; not included)
	Cable Input	Each input requires SeaHawk LC-KIT: 15ft (4.57m) leader cable and EOL (LC-KIT not included)
	Maximum Length	1,000ft (305m) per zone
	Detection Response Time	20-3,600sec, software adjustable in 10sec increments; ± 2 sec
Outputs		
	Relays	1 Form C Summary Alarm Relay, 1 Form C Alarm 1 Relay, 1 Form C Alarm 2 Relay, 1 Form C Alarm 3 Relay, 1 Form C Alarm 4 Relay, 1 Form C Alarm 5 Relay, 1 Form C Alarm 6 Relay; 1A @ 24VDC, 0.5A resistive @ 120VAC; configurable for supervised or non-supervised, latched or non-latched
Communications Ports		
	EIA-232	9600 baud; Parity none; 8 data bits, 1 stop bit
	EIA-485	1200, 2400, 9600 or 19,200 baud; Parity none, odd, even (programmable); 8 data bits, 1 stop bit

Table C.1 Technical Specifications (continued)

Protocols		
	Terminal Emulation (EIA-232)	VT100 compatible
	Modbus (EIA-485)	Slave; RTU Mode; Supports function codes 03, 04, 06 and 16
Alarm Notification		
	Audible Alarm	85dBA @ 2ft (0.6m); re-sound (disabled, 8, 16, or 24 hours)
Front Panel Interface		
	LED Indicators	Power: 1 green (on/off); Status (1 per zone): 6 tri-color (Power On: green; Alarm: red; Cable Fault: yellow)
	Push Buttons	Quiet/Test/Reset: 1
Operating Environment		
	Temperature	32° to 122°F (0° to 50°C)
	Humidity	5% to 95% RH, non-condensing
	Altitude	15,000ft (4,572m) max.
Storage Environment		-4° to 158°F (-20° to 70°C)
Dimensions		10.5"W x 8.0"H x 2.0"D (267mmW x 203mmH x 51mmD)
Weight		6 lbs. (2.72kg)
Mounting		Vertical wall mount
Certifications		CE; ETL listed: conforms to UL STD 61010-1, EN STD 61010-1; certified to CSA C22.2 STD NO. 61010-1; RoHS compliant